 


# 3M™ Wireless Communication System, Model XT-1


## Instructions for Headset Controls and Charging Batteries

### Headset Controls:

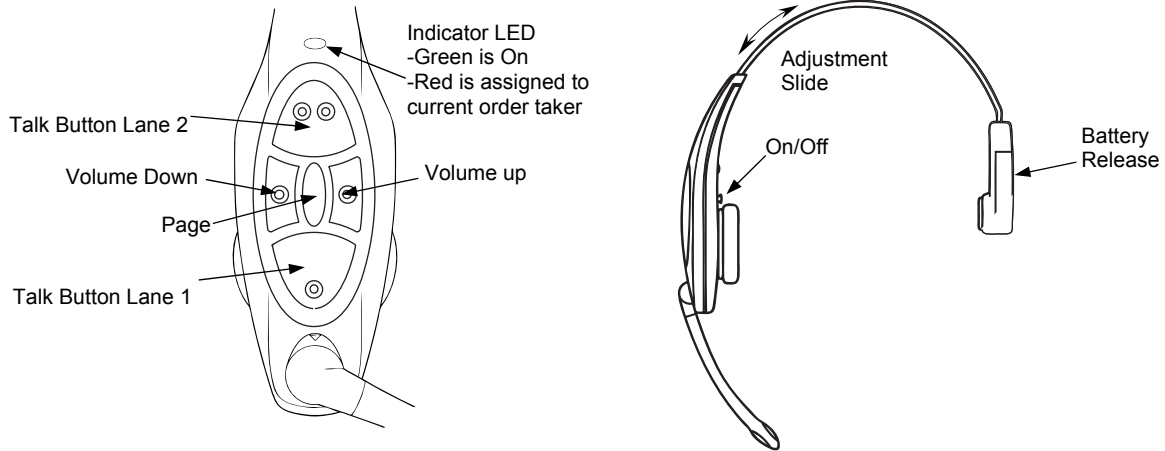

### Removing Batteries:


- Slide and hold the battery release.
- Remove the discharged battery from the battery housing.
- Insert a fully charged battery in the housing with the notch facing the battery release. Make sure the battery is fully inserted (battery release clicks)

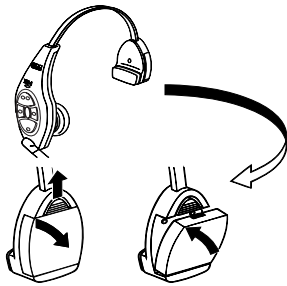

### Charging Batteries:

To charge a battery, insert the battery in one of the charging slots as shown below.

- The indicator lights RED to indicate the battery is charging.
- The indicator lights GREEN to indicate the battery is charged.
- Charge batteries after every shift

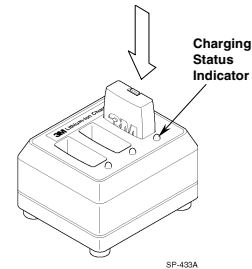

### Order Taking Mode Abbreviations:

*See your Manager to confirm which Order Taking Mode your headset is using*

#### (ML) Manual Listen:

- Tap Talk button to turn on Customer Order Point microphone and hear the customer.
- Customer Order Point microphone stays on until vehicle departs

#### (AL) Automatic Listen:

- Headset beeps when vehicle detected; no buttons to push on the headset
- Customer Order Point microphone turns on and stays on until vehicle departs

#### (PTT) Push To Talk:

- Push and Hold the Talk button to talk to the customer
- Release the Talk button to turn off microphone so customer cannot hear you

#### (MLT) Manual Latching Talk:

- Tap the Talk button to talk to the customer
- Customer Order Point microphone stays on until you tap the Talk button again or vehicle departs